


WITNESS P PARTS EXPLOSION

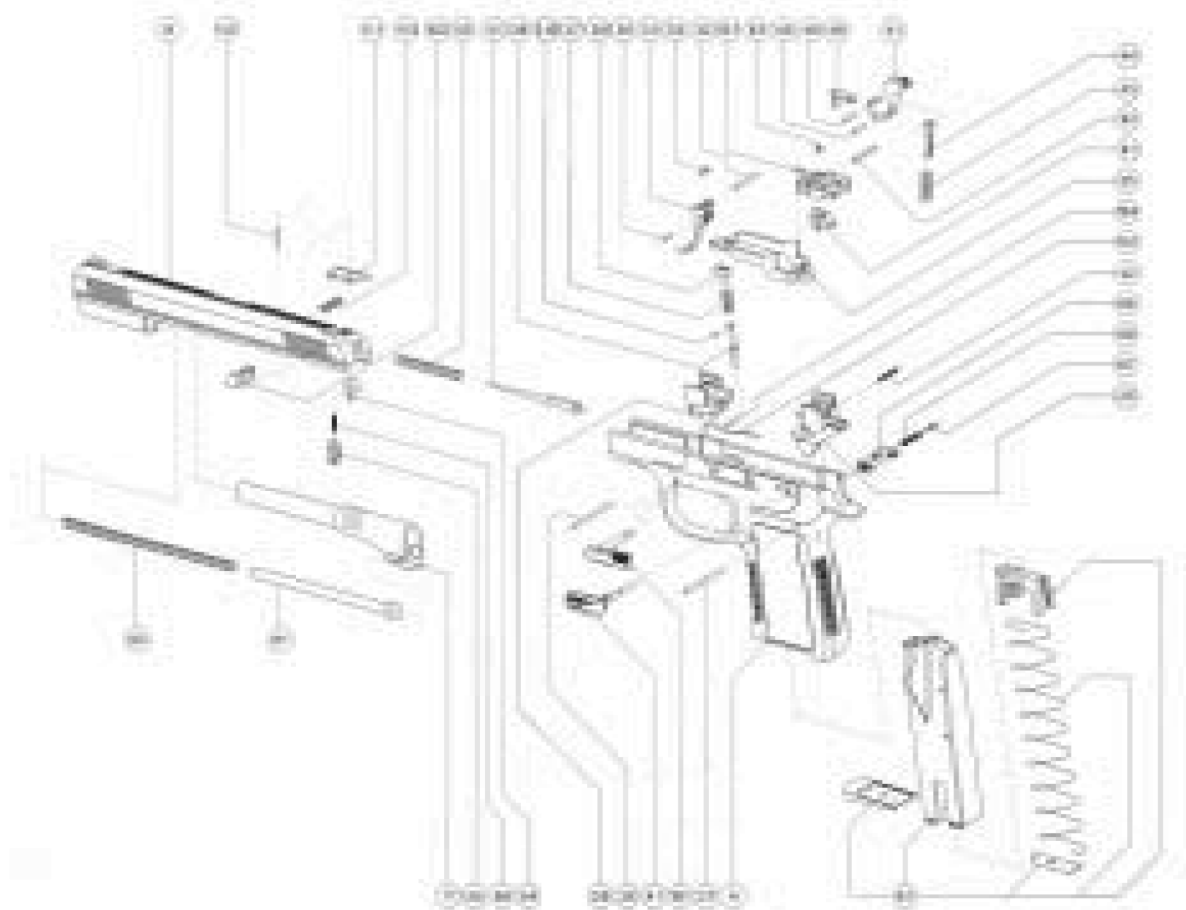

WITNESS P PARTS LIST

- | | |
|------------------------------|--------------------------------|
| 1.1 BARREL | 6.1 MAGAZINE |
| 2.5 P REAR INSERT | 6.6 MAGAZINE CATCH |
| 2.6 P FRONT INSERT | 6.7 MAGAZINE CATCH PLUNGER |
| 2.7 P REAR INSERT PIN | 6.8 MAGAZINE CATCH SPRING |
| 2.8 P FRONT INSERT PIN | 8.1 RECOIL SPRING GUIDE |
| 3.1 P TRIGGER | 8.3 RECOIL SPRING |
| 3.2 P TRIGGER PIN | 9.1 SEAR |
| 3.3 TRIGGER SPRING | 9.2 SEAR PIN |
| 3.5 TRIGGER BAR | 9.3 SEAR SPRING |
| 3.6 TRIGGER BAR PIN | 10.2 REAR SIGHT |
| 3.7 TRIGGER BAR SPRING | 11.1 EXTRACTOR |
| 3.8 TRIGGER BAR GUIDE | 11.2 EXTRACTOR PIN |
| 3.9 TRIGGER BAR PLUNGER | 11.3 EXTRACTOR SPRING |
| 3.10 TRIGGER BAR PLUNGER PIN | 13.1 SEAR HOUSING |
| 4.1 HAMMER | 14.1 P SAFETY |
| 4.2 P HAMMER PIN | 18.1 SLIDE STOP PIN |
| 4.3 HAMMER SPRING | 18.3 SLIDE STOP PIN SPRING |
| 4.4 HAMMER STRUT | 18.4 SLIDE STOP PIN SPRING PIN |
| 4.5 HAMMER STRUT PIN | A FRAME |
| 4.8 INTERRUPTOR | B SLIDE |
| 4.9 INTERRUPTOR PIN | |
| 5.1 FIRING PIN | |
| 5.3 FIRING PIN SPRING | |
| 5.4 FIRING PIN RETAINER | |
| 5.5 FIRING PIN SAFETY | |
| 5.6 FIRING PIN SAFETY SPRING | |