


# WITNESS P PARTS EXPLOSION

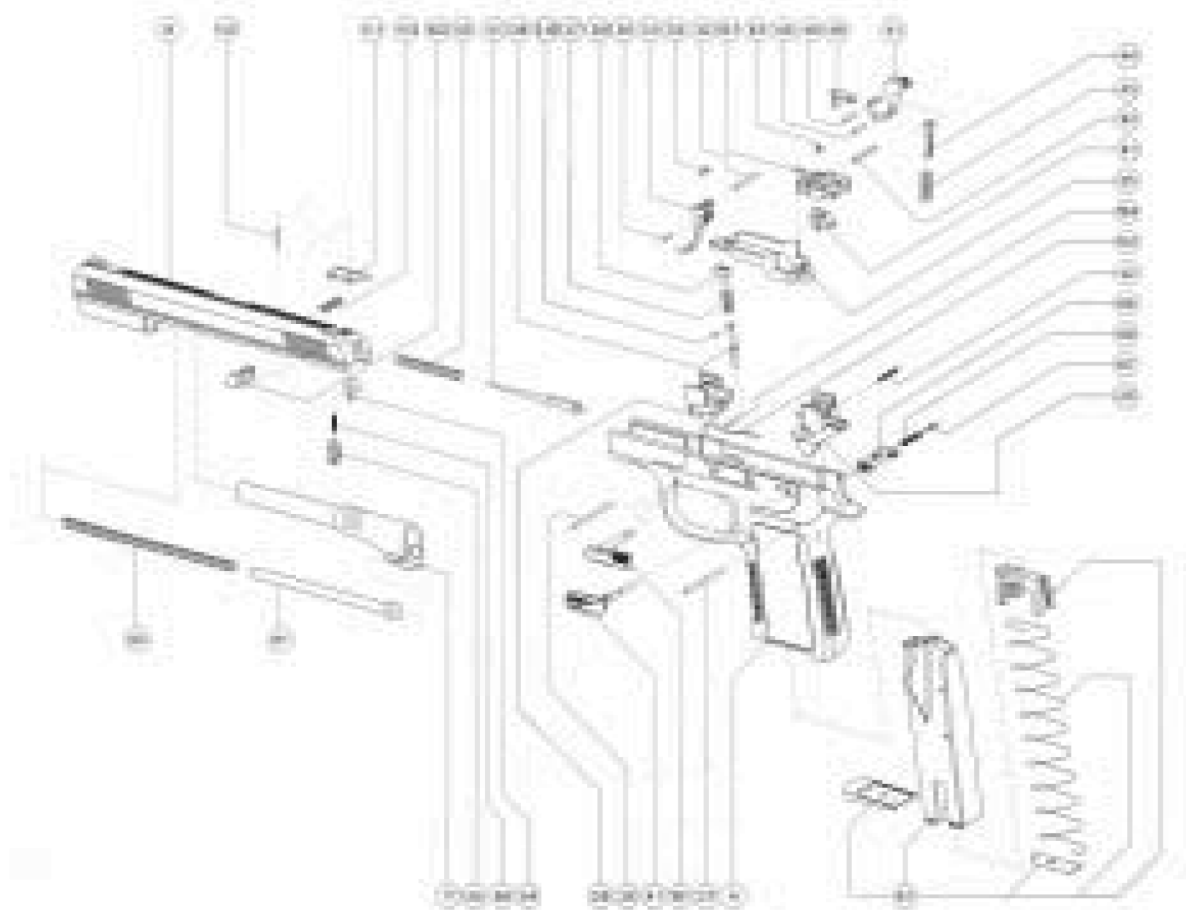

## WITNESS P PARTS LIST

- |                              |                                |
|------------------------------|--------------------------------|
| 1.1 BARREL                   | 6.1 MAGAZINE                   |
| 2.5 P REAR INSERT            | 6.6 MAGAZINE CATCH             |
| 2.6 P FRONT INSERT           | 6.7 MAGAZINE CATCH PLUNGER     |
| 2.7 P REAR INSERT PIN        | 6.8 MAGAZINE CATCH SPRING      |
| 2.8 P FRONT INSERT PIN       | 8.1 RECOIL SPRING GUIDE        |
| 3.1 P TRIGGER                | 8.3 RECOIL SPRING              |
| 3.2 P TRIGGER PIN            | 9.1 SEAR                       |
| 3.3 TRIGGER SPRING           | 9.2 SEAR PIN                   |
| 3.5 TRIGGER BAR              | 9.3 SEAR SPRING                |
| 3.6 TRIGGER BAR PIN          | 10.2 REAR SIGHT                |
| 3.7 TRIGGER BAR SPRING       | 11.1 EXTRACTOR                 |
| 3.8 TRIGGER BAR GUIDE        | 11.2 EXTRACTOR PIN             |
| 3.9 TRIGGER BAR PLUNGER      | 11.3 EXTRACTOR SPRING          |
| 3.10 TRIGGER BAR PLUNGER PIN | 13.1 SEAR HOUSING              |
| 4.1 HAMMER                   | 14.1 P SAFETY                  |
| 4.2 P HAMMER PIN             | 18.1 SLIDE STOP PIN            |
| 4.3 HAMMER SPRING            | 18.3 SLIDE STOP PIN SPRING     |
| 4.4 HAMMER STRUT             | 18.4 SLIDE STOP PIN SPRING PIN |
| 4.5 HAMMER STRUT PIN         | A FRAME                        |
| 4.8 INTERRUPTOR              | B SLIDE                        |
| 4.9 INTERRUPTOR PIN          |                                |
| 5.1 FIRING PIN               |                                |
| 5.3 FIRING PIN SPRING        |                                |
| 5.4 FIRING PIN RETAINER      |                                |
| 5.5 FIRING PIN SAFETY        |                                |
| 5.6 FIRING PIN SAFETY SPRING |                                |