


SMALL BORE BOUNTY HUNTER EXPLODED VIEW

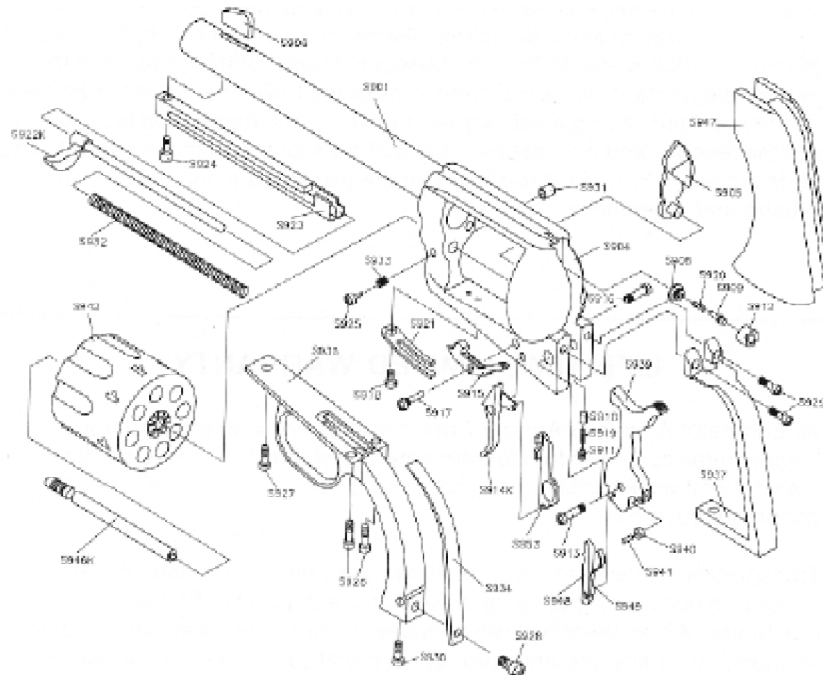

PARTS LIST

- | | |
|-------------------------------|-----------------------------------|
| S 901. Barrel | S 926. Rear Trigger Guard Screw |
| S 904. Frame | S 927. Front Trigger Guard Screw |
| S 905. Gate | S 928. Main Spring Screw |
| S 906. Front Sight | S 929. Upper Backstrap Screw |
| S 907. Ejector Tube Spacer | S 930. Lower Backstrap Screw |
| S 567A. Recoil Plate | S 931. Base Pin Release Nut |
| S 655Z. Firing Pin | S 932. Ejector Spring |
| S 910. Gate Detent | S 933. Base Pin Release Spring |
| S 911. Gate Screw | S 934. Mainspring |
| S 567. Recoil Cup | S 935. Trigger Guard |
| S 913. Hammer Screw | S 937. Backstrap |
| S 914K. Trigger | S 939. Hammer |
| S 915. Bolt & Cylinder Stop | S 940. Hammer Roller |
| S 916. Trigger Screw | S 941. Hammer Pin |
| S 917. Bolt Screw | S 944. Cylinder (Specify Caliber) |
| S 918. Bolt Screw Spring | S 945. Base Pin Bushing |
| S 919. Gate Spring | S 946K. Base Pin |
| S 921. Sear & Bolt Spring | S 947. Set Grips |
| S 922K. Ejector Rod | S 948. Hand |
| S 923. Ejector Tube | S 949. Spring for Hand |
| S 924. Ejector Tube Screw | S 953. Transfer Bar |
| S 925. Base Pin Release Screw | |