MC14 T USER MANUAL



WARNING

Please read this manual carefully and do not use this pistol until you have fully understood all the safety instructions and its handling procedures. If you require further information, do not hesitate to contact support.

TABLE OF CONTENTS

- SAFETY RULES
- WARNINGS
- TECHNICAL SPECIFICATIONS
- MAIN COMPONENTS
- OPERATION PRINCIPLES
- MAINTENANCE
- TROUBLESHOOTING
- WARRANTY

SAFFETY RULES

• Always treat your firearm as if it is loaded.
• Always ensure that the safety is fully engaged until ready to lire.
• Firearms can be dangerous and can potentially cause serious injury, damage to property or death if handled improperly and carelessly.
• Always remember that almost all firearms accidents are caused by a failure to obey the basic safety rules.
• As an owner and user of a firearm, you are responsible for securing and safely handling of your firearm safely at all times.
• Always keep the muzzle of the pistol pointed in a safe direction. A safe direction is specified as towards an area where there are no people and any living creature.
• Keep your finger off the trigger and outside of the trigger guard until your sights are aligned on the target and you are ready to lire.
• Always check your target and the environment before firing in order that what is beyond it and where the bullet will hi t.
• Whenever you handle your pistol, while keeping the muzzle pointed in a sale direction and your linger outside the trigger guard, remove the magazine, lock the slide open at rear position and visually check the chamber to be certain that it is clear of any ammunition or brass, and check the barrel for any possible obstructions.
• Read the instruction manual supplied with your firearm thoroughly and learn functions and operations of the pistol very well before carrying, using, or loading. Never use any firearm unless you completely understand its operation and safety features.
• Only use ammunition recommended by the firearm manufacturer, and always make sure that the ammunition matches the caliber of your gun. Attempting to lire even a single improper bullet can destroy your gun and cause serious personal injury or death.
• Before firing your weapon, you should routinely make sure that your firearm is in good working order and that the barrel is clear of dirt and obstructions. A small bit of mud, gun grease, excess lubricating oil or rust can cause pressure to build up to the point where the barrel bulges or bursts upon firing, resulting in a damaged gun and serious bodily injury to the shooter or those around him.
• Never use the pistol under the influence of drugs or alcohol.
• Never aim at doors, panes of glass, walls, concrete, stone or flat surfaces (including water) with your pistol.
• Always use protective glasses and earplugs when shooting or observing. Exposure to the noise of gunfire can permanently damage your hearing ii protection is not used.
• Always store your pistol unloaded and secure in a safe storage case in a cool ventilated area.
• Always keep your pistol away from the children and untrained adults.
• Always secure your firearm and ammunition separately so that they are not accessible to children and/or other unauthorized persons.

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Get competent firearms instruction in safe handling before using this firearm. Please ask your dealer for names of qualified instructors near you. All guns are extremely dangerous if carelessly handled or used. Remember that the firearm user is the primary "safety" and that reliance on any mechanical safety device should never replace safe handling procedures. This firearm WILL FIRE if a cartridge is in the chamber and the trigger is pulled while the safety is disengaged.

DO NOT LOAD THIS PISTOL UNTIL YOU UNDERSTAND HOW IT OPERATES.

KEEP this pistol unloaded at all times except when you are ready to fire and are sure of your target.

ALWAYS carry this pistol in a case or original box unloaded.

NEVER point this pistol at anything that is not your intended target even if the pistol is unloaded. When loading, unloading, cleaning or handling, always be sure the muzzle is pointed in a safe direction and always keep your finger off the trigger.

NEVER assume any gun is unloaded. Before handling, check to make sure the chamber is empty. See Unloading Instructions. Make sure you know that this or any firearm is fully unloaded before displaying or handling it. When handling any firearm, keep your fingers away from the trigger at all times until you intend to fire.

Get instructions from a competent firearms instructor before using this or any firearm. Learn from a professional how to handle, load, unload, operate, fire and care for your gun.

NEVER PLAY with your firearm. It is not a toy and can be a very dangerous weapon that can cause serious personal injury or death.

Always keep the gun pointed in a safe direction. Treat every gun as if it is loaded...all the time. NEVER point any firearm (loaded or unloaded) at any person or anything you do not intend to shoot. Always keep your gun unloaded until ready to use and make sure that it is unloaded before cleaning.

Keep your finger OFF the trigger until you are actually aiming at the target and ready to shoot. Learn to rest your finger outside of the trigger guard.

Never rely on a gun's "safety" to protect you from unsafe gun handling. A safety is only a mechanical device, not a substitute for using common sense and following gun safety procedures. Never leave a gun unattended or where it could fall.

Store guns and ammunition separately beyond the reach of children. Make sure that they are properly secured so untrained individuals and children will be denied access to your guns and ammunition.

Test your gun's operation and safeties only at a shooting range while the firearm is pointed in a safe direction.

If a gun fails to fire when the trigger is pulled, keep it pointed down range at the target for 60 seconds. Sometimes slow primer ignition will cause a "hang fire"

If a gun fails to fire when the trigger is pulled, keep it pointed down range at the target for 60 seconds. Sometimes slow primer ignition will cause a "hang fire" and the cartridge will go off after a short pause. If it still fails to fire, keep the muzzle pointed in a safe direction and avoid exposure to the breech, as you attempt to unload your firearm.

Know your target and what is beyond. Ask yourself what your projectile will hit if it misses the target or passes through the intended target. Remember, a fired projectile can travel over a mile (including a ricochet) and is capable of going through walls. Never shoot at hard flat surfaces or water, bullets ricochet.

Guns and alcohol or drugs do not mix. Don't take any alcoholic beverages and/or drugs before or during shooting activities.

Never pull a gun toward you by the muzzle. Don't climb a tree, cross a ditch or fence with a loaded gun.

Always empty guns before entering a house, car, truck, boat, RV, camp or any building.

When receiving a gun, always open the action and check to make sure the chamber is unloaded.

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

NEVER accept anyone s word that a gun is unloaded or empty. You should immediately open the action and check to make sure it is unloaded.

Be careful with ALL ammunition. Even "blank" cartridges are deadly at close range due to the muzzle blast. Make sure your ammunition is new and in good clean condition.

Do NOT oil or grease ammunition as this may damage the cartridge primer. Do NOT tamper with or alter the standard factory ammunition.

Keep firearms unloaded when not actually in use. Load the gun only when on the range preparing to fire and unload it before leaving the range.

Never put your hand over the muzzle of a gun.

ALWAYS WEAR protective shooting glasses and hearing protection when using firearms.

Spectators should be at least 10 feet behind and away from the shooter while the shooter is loading, shooting and unloading. Spectators should wear eye and ear protection and avoid distracting those shooting their firearms.

Never drop your gun. If you do drop it, unload it and check it for proper function before using it again.

Do NOT alter or modify your gun. Don't try to change your gun's trigger pull, because it may affect sear engagement and thereby cause accidental firing.

Do NOT remove any internal safety or safety device on the firearm. Safety mechanisms are designed to help protect you from personal injury or death.

Properly maintain and keep your gun clean. Keep it in a dry place away from other metals and water. If your gun shows sign of corrosion or improper operation, have it serviced by a competent gunsmith.

Keep the muzzle pointed in a safe direction when loading and unloading your gun. Never point the muzzle at anyone. Never let water, snow, mud or other material enter the barrel. Always be sure the barrel is free of any obstruction.

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Teach children: 1. NOT to touch guns, bullets, cartridges, shells, flares or any explosive device and 2. That if they discover such a dangerous item or weapon, they must immediately report its location to their parents, school teacher or police.

Remember a firearm has the capability of taking your life or the life of someone else. Be careful with your firearm - an accident is almost always the result of not following basic safety rules

YOUR OWNER'S MANUAL

Always keep this manual with your firearm. Make sure you understand all the warnings, operation instructions and safety procedures. When you lend, give or sell the firearm, be sure this manual goes with it. You can get a copy of this manual from European American Armory Corp. upon request. ALL PARTS ORDERS ARE SUBJECT TO A $10.00 CHARGE FOR SHIPPING AND HANDLING. Please state Model, Caliber, Serial Number, and Finish Color when ordering. For parts, information and service contact: European American Armory Corp. Phone: (321) 639-4842.

WARRANTY
Please fill the part below, send a copy to:

European American Armory Corp. 1426 King Street
Cocoa, FL 32922
Or by email to:
eaacorp@eaacorp.com

Make a copy of this manual, proof of purchase/sales record for safekeeping in a secure or fireproof container. Such proof is necessary if the firearm is damaged, stolen or sent in for warranty repair.

NAME

SURNAME

ADDRESS

POST CODE

CITY

COUNTRY

MODEL

SERIAL NUMBER

DATE OF PURCHASE AND SELLER

WARNING



ALTERATIONS OR MODIFICATIONS

Altering or modifying parts and/or internal safeties is dangerous and will void the warranty. This pistol was manufactured to perform properly with the original parts as designed. It is your duty to make sure any parts you buy are made for this firearm and are installed correctly and that neither the replacements nor originals are altered or changed. Your gun is a complex precision tool with many parts that must relate correctly to other parts in order for proper and safe operation.

Putting a gun together wrong or with incorrect or modified parts can result in a damaged gun, danger, and personal injury or death to you and others through malfunction. Always have a qualified gunsmith work on your gun or at least check any work not performed by a gunsmith.



LEAD WARNING

The actual firearm does not contain any lead; however, it does fire ammunition which contains lead or lead compounds known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who discharge a firearm, stand near someone who discharges a firearm or clean firearms are hereby warned of the dangers presented by lead and lead compounds and should take protective health measures. Avoid exposure to lead while handling and wash your hands after contact. Proper air ventilation is absolutely necessary when shooting indoors.

Este producto puede exponerlo a químicos incluyendo PLOMO, que es conocido por el Estado de California como causante de cáncer y defectos de nacimiento u otros daños reproductivos. Para mayor información, visite www.P65Warnings.ca.gov.

These products can expose you to chemicals including LEAD, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

WARNING



YOU RISK PERSONAL INJURY OR DEATH BY HANDLING THIS FIREARM

DANGEROUS WEAPONS and are sold by European American Armory Corp. with the specific understanding that we are not responsible in any manner whatsoever for their safe handling or resale under local laws and regulations. European American Armory Corp. shall not be responsible in any manner whatsoever for malfunctioning of the firearm, for physical injury or for property damage resulting in whole or in part from (1) intentional or negligent discharge, (2) improper or careless handling, (3) unauthorized modifications and/or alteration of the internal/safety mechanisms, (4) defective, improper, high pressure, hand-loaded, or reloaded ammunition, (5) corrosion and/or lack of proper maintenance (6) neglect, or (7) other influences beyond our direct and immediate control. This limitation applies regardless of whether liability is asserted on the basis of contract, negligence or strict liability (including any failure to warn).

Under no circumstance shall European American Armory Corp. be liable for incidental or consequential damages, such as loss of use of property, commercial loss and loss of earnings or profits.

DISCLAIMER OF LIABILITY

Neither EAA Corp or Girsan, shall be responsible for product malfunctioning or for physical injury, death or damage to property resulting from either intentional or accidental discharge of this firearm, its criminal or negligent use, improper or careless handling, unauthorized modifications, or alterations, use of defective or improper or hand-loaded or (replaced) ammunition, or from its use for purposes or subjection to treatment for which it was not designed. For your safety, use only original high quality commercially manufactured ammunition in good condition that is appropriate to the caliber/gauge of your gun. EAA Corp and Girsan shall not be responsible for product or its result from use of defective, improper or reloaded ammunition. EAA Corp and Girsan reserve the right to add to/ modify the content of this manual at any time. Note: Photographs shown in this manual may not be from the exact model that you have but the instructions will still apply.

MANUFACTURER'S WARNING



This firearm was manufactured to properly perform with the original parts as designed. It is your duty to make sure any parts you buy are correctly installed and that neither replacements nor originals are altered or changed. Your gun is a complex tool with many parts that must relate correctly to other parts for safe and accurate operation. Putting a gun together wrong or with modified parts can result in a damaged gun, or personal injury or death to you or others. Always let a qualified gunsmith work on your gun or at least, check any work not performed by a gunsmith. Firearms safety is your primary concern.

THE GUN OWNER MUST ACCEPT FULL RESPONSIBILITY FOR THE CORRECT REASSEMBLY AND FUNCTIONING OF THE FIREARM AFTER ANY DISASSEMBLY OR REPLACEMENT OF PARTS.

TO CLEAN AND MAINTAIN YOUR PISTOL:

A) Follow procedures for unloading pistol as described previously.

B) Follow procedures for disassembly of pistol as described previously.

C)Materials needed to clean this pistol are: a cleaning rod, cotton bore patches, brass bore brush, powder solvent, a small soft brush and good quality gun oil.

D) Using the bore brush with powder solvent, scrub the interior of the barrel and chambers to remove any powder and lead residue in the bore. Always and lastly, swab the interior of the barrels with cotton patch with gun oil to coat and protect the bore and chambers from rust and corrosion.

E) Any powder fouling on the firing wall, barrel, etc. can be easily cleaned with a brush and powder solvent.

F) All external surfaces should be wiped down with a light coat of rust preventative. Avoid using too much oil as powder, dust or other foreign material may get trapped in the oil. This could lead to congealed deposits which may interfere with the safe and reliable operation of the pistol.

G) USE CAUTION while using solvents in gun bore cleaning. Prolonged or excess contact with solvents can damage the gun's bluing and finish. Be sure to wipe away all excess solvent and then lubricate with oil.

H) A gun should be cleaned after firing. In addition, external parts should be wiped with an oiled cloth after handling. A light oil is ordinarily all that is necessary in cleaning if the gun has not been fired or fired very little. If a gun is used frequently, it must be cleaned after each firing and regularly serviced by a professional gunsmith. If the gun has been stored, remove all excess oil and/or grease before firing. Always check to be sure that no cleaning patch or other obstruction remains in the bore or chambers before firing.

WARNING EYE AND EAR PROTECTION

When shooting, full eye and ear protection is mandatory at all times. Shooters and spectators must wear shooting glasses and hearing protection to prevent eye injury and hearing loss. Vision and hearing impairment can occur with only one moment of non-protection



DANGER – AMMUNITION WARNING

Firearms may be damaged and serious personal injury or death to the shooter or bystanders may result from any condition which contributes to the generation of excessive pressure or uncontrolled release of gas within the firearm. Such adverse conditions can be caused by bore or chamber obstruction, propellant powder overloads or by defective, incorrect or improperly loaded and assembled cartridge components. Even the strongest firearm can be blown up as a result of excessive pressure. It is extremely dangerous to use a cartridge whose pressure is greater than that developed by cartridges loaded to industry standards.

AMMUNITION (CARTRIDGES) NOTICE

We specifically disclaim responsibility for any damage, personal injury or death occurring in connection with or as the result of the use of European American Armory Corp. pistols with faulty, nonstandard, remanufactured, hand-loaded or reloaded ammunition, or with cartridges other than factory cartridges for which the firearm was originally chambered.

LOCKING YOUR PISTOL



Use the Cable Lock Provided with your Pistol

This pistol comes with a cable lock to assist in protecting against unauthorized use. The pistol must be unloaded when the security lock and block are in place on the pistol.

WARNING: Using the cable lock and block or lockable case cannot substitute for securing your firearm and ammunition in separate, locked locations.

The cable lock operates as follows:

A) Remove security lock and block from its package that came with the firearm.

B) Begin by locking the slide in the open position. Then feed one end of the cable through the magazine well up through the ejection port of the slide. Finally, insert the cable into the lock block .



WARNING: Always store the key to the cable lock: (1) in a separate location away from the pistol; (2) in a secure location unknown and not accessible to others, especially children.

Whether you secure your firearms by using the supplied cable lock, a gun lock or safe or some other mechanism, it is YOUR RESPONSIBILITY to store your firearms in such a manner that children and other unauthorized persons cannot gain access to them.

WARNING: Always store the key to the cable lock: (1) in a separate location away from the pistol; (2) in a secure location unknown and not accessible to others, especially children. Whether you secure your firearms by using the supplied cable lock, a gun lock or safe or some other mechanism, it is YOUR RESPONSIBILITY to store your firearms in such a manner that children and other unauthorized persons cannot gain access to them.



USED FIREARMS - Firearms are sometimes altered to work incorrectly, or parts may be removed, lost or replaced with incorrect parts. If you received your European American Armory Corp firearm as a used gun, BEFORE USING IT you should take it to a qualified gunsmith who knows EAA Corp firearms and have him examine it. WRITE EUROPEAN AMERICAN ARMORY CORP concerning any items or circumstances that you do not understand and which might relate to your safety and the operation of your firearm at: European American Armory Corp., 1426 King Street, Cocoa, FL 32922, (321) 639-4842, or eaacorp@eaacorp.com

WARNING (POTENTIAL OBSTRUCTIONS) - BEFORE LOADING or firing a pistol, examine the bore and the firing chamber to be certain they are clean and free of any obstruction. Even a heavy coat of oil, grease, snow or water may result in damage to the firearm and injury to the shooter and/or persons near the firearm.

A misfire or unusual sound upon firing is a signal to cease firing and to examine the chamber and bore. If there is any obstruction, clear the obstruction and clean the bore and chamber before firing. Any bore obstruction, even if it is only partly blocked, may cause the gun to blow up if it is fired, or may cause damage to the gun such as a bulged barrel. To avoid injury or death to the shooter or bystanders, check the barrels before shooting or if a shot does not sound normal.

WARNING - Always keep the muzzle pointed in a safe direction! Never attempt to load or unload any firearm inside a vehicle, building or other confined space (except a properly constructed shooting range). Enclosed areas frequently offer no completely safe direction in which to point the firearm. If an accidental discharge occurs, there is great risk of death, personal injury or property damage. Before loading, always clean all, grease and oil from the bores and chambers, and check to be certain that no obstructions are in the barrel.

Any foreign matter in the barrels could result in a bulged or burst barrel or other damage to the firearm and could cause serious injury to the shooter or to others.

WARNING - If there is any reason to suspect that a projectile is obstructing the barrel, immediately unload the firearm (See Unloading Instructions) and check the chamber and the bore. A projectile or some other matter may be lodged some distance down the barrel where it cannot easily be seen. Check the bore by using a cleaning rod to pass through the barrel. If a blockage is in the bore.



DO NOT ATTEMPT TO SHOOT IT OUT WITH ANOTHER CARTRIDGE, OR BLOW IT OUT WITH A BLANK CARTRIDGE OR A CARTRIDGE FROM WHICH THE BULLET HAS BEEN REMOVED. SUCH TECHNIQUE(S) CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM AND CAUSE SERIOUS PERSONAL INJURY

If the blockage can be removed with a cleaning rod, clean any unburned powder grains from the bore, chambers and mechanism before resuming shooting. If the blockage cannot be dislodged by tapping it with a cleaning rod, take the firearm to a gunsmith.


WARNING (Mechanical Malfunctions) - STOP SHOOTING IMMEDIATELY AND UNLOAD YOUR FIREARM if your firearm develops: a mechanical malfunction; binding or stoppage; spitting powder/gas; a punctured cartridge primer; a bulged or ruptured cartridge case; or a sound on firing does not sound quite right. Do NOT try one more shot but unload your firearm and take it and the ammunition to a qualified gunsmith or send the firearm back to European American Armory Corp. for examination. Do not assume that the pistol is empty merely because you checked the chamber. You must also check the bore for any obstruction inside the barrel.

TECHNICAL FEATURES

	MC 13T	MC 14T
Caliber	32 Acp 7,65 mm	380 acp
Operating System	Blow Back	Blow Back
Firing System	Semi Automatic/Double Action/ Single Action	Semi Automatic/Double Action/ Single Action
Length	7.375”	6.8”
Height	4.625”	4.6"
Width	1.25”	1.25”
Weight (without magazine)	1.4 LBS	1.4 LBS
Magazine Capacity	13 Rounds	13 Rounds
Weight of Empty Magazine	.15 LBS	.15
Barrel Length	4.5”	3.81”
Barrel Life	30.000 Fring	30.000 Fring
Sight System	Fixed front sight, Slot rear sight	Fixed front sight, Slot rear sight
Line of Sight	116,8 mm	116,8 mm
Safety System	Right and left safety latch, Auto Firing Pin Block	Right and left safety latch, Auto Firing Pin Block
Effective Range	25m (± 5 m)	40m (± 5 m)

MAIN COMPONENTS

1. Slide
2. Recoil spring
3. Recoil spring guide
4. Barrel
5. Frame (Grip and trigger group)

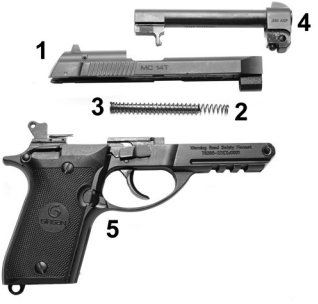

OPERATION PRINCIPLES

Girsan MC14T pistols are semiautomatic firearms operating on direct blowback system. Upon firing, the pressure developed by combustion gas in the chamber recoils the slide rearward and the slide stops when it can no longer overcome the recoil spring pressure.

Period of the slides rearward movement extracts and ejects the fired cartridge case, cocks the hammer and compress the recoil spring. With the force of the tense recoil spring, the slide then moves forward feeding the next cartridge from the magazine into the chamber. The slide stays open after the last cartridge in the magazine has been fired and ejected.



LOADING THE MAGAZINE: CAUTION!! Make sure the chamber is not already loaded. To Remove the Magazine: Depress the Magazine Release Button located on the left side's front middle pistol grip, and withdraw magazine.

To Load the Magazine: Hold the magazine in one hand. With your other hand place a cartridge on the follower in front of the lips (See figure 1), press down and slide the cartridge completely back under the lips. Repeat loading until the magazine contains thirteen 380acp cartridges. DO NOT try to force an extra cartridge into the magazine.



Figure 1

TO LOAD THE PISTOL BY USING BARREL LEVER / Tip Up Lever: 1st engage the safety so as to prevent the pistol from firing. (See figure 2)



Figure 1

Release the Barrel by a downward movement of the Tip Up Lever, which is located on the frame's Right side above the trigger. (See figure 3)



Figure 3

Insert a cartridge into the chamber, (See figure 4)



Figure 4

then push the barrel down. (See figure 5) A sharp click indicates Barrel Lever Engagement. (As a precaution, visually inspect that the Barrel Lever is securely closed or up Parallel to the frame). (See figure 6)



Figure 5



Figure 6

The pistol is now chamber loaded, ready to be fired by trigger pull if the safety is disengaged.

Push the fully loaded magazine into the frame / magazine well. (See figure 7) A sharp click indicates magazine catch engagement. The pistol is now chambered, and magazine loaded and ready to fire once the safety is disengaged



Figure 7

If the hammer is lowered at rest against the slide, the pistol can be fired by double action trigger pull (direct trigger pull—no manual hammer cocking). Therefore, as a safety precaution, always keep the safety engaged until you are ready to fire. The Safety locks the slide when the red warning dot is covered and the Safety can go up no further. NOTE: Due to the unique barrel tilting system, the Model MC14T has no EXTRACTOR. As long as you use appropriate undamaged ammunition and keep the chamber clean you will not have loading and unloading problems.

Note: This pistol also has an automatic firing pin block, so the

trigger must be moved fully reward to disengage the automatic firing pin block. Thus this pistol is safe to carry, in what is called a “cocked and locked condition”. Before you carry in this manner we request you have proper firearms training by a professional trainer (Not your friend down the street). Until such training, always carry this pistol with the hammer down and safety engaged and empty chamber. Please remember the best safety is a properly trained firearms user or a fully unloaded firearm.

TO LOAD THE PISTOL BY SLIDE MANIPULATION: With the safety engaged. (See figure 8)



Figure 8



Figure 9

Push the fully loaded magazine into the firearm magazine well. A click sound indicates magazine catch engagement. Remember—when the hammer is fully-lowered and Safety is "ON" the slide cannot be pulled backwards.

DISENGAGE SAFETY (push down—Safety which unlocks the slide/RED WARNING DOT visible). (See figure 9)

Grasp the slide serration with thumb and index finger (keep finger outside the trigger guard) (See figure 10), retract the slide to solid stop (activating the recoil springs and cocking the hammer).



Figure 10

QUICKLY release the slide. The slide will automatically close, chambering the first cartridge from the magazine. The hammer is

fully-cocked. The pistol is ready to fire. NOTE: Exercise Extreme Caution. Always point the Muzzle in a Safe Direction. ENGAGE SAFETY unless you intend to shoot.

CAUTION!! Since the Slide has no Extractor the chamber cannot be unloaded by slide retraction, therefore, DO NOT retract and release the slide over a loaded magazine as the slide will jam the top cartridge from the magazine against the chambered cartridge.

UNLOADING OF PISTOL AND MAGAZINE: As a safety precaution, whether the hammer is fully-lowered, half-cocked or fully-cocked, ENGAGE THE SAFETY. (See figure 11)



Figure 11

Release the barrel by a downward movement of the Barrel Lever / Tip Up Leaver (See figure 12) and remove the chambered cartridge. (See figure 13)



Figure 12



Figure 13

NOTE: Quick barrel release may eject the chambered cartridge. If the barrel is released under finger pressure, the cartridge will remain in the chamber. Elevate the muzzle and the cartridge will fall out. Since the Model MC14T slide does not have an extractor, the chamber cannot be unloaded by slide

retraction. Depress the Magazine Release Button and remove the magazine. (See firgure 14)



Figure 14

Disengage the Safety and fully-lower the hammer (make sure the chamber is empty and the magazine is removed). To unload the magazine: press down on the cartridge rim with your thumb and push, the bullet over the front wall of the magazine. Repeat until unloaded. Remember—to avoid malfunction, always keep the magazine clean. Dropping the magazine may dent the body, and bend and/or burr the lips.

HOW TO LOWER THE HAMMER: WARNING!

Even though the Model MC14T has an automatic firing pin block a falling hammer with the trigger in the fully reward position can or will cause discharge, especially if the cartridge has a sensitive primer. We do not recommend lowering the hammer on a chambered round. To lower the hammer on the MC14 T make sure the safety is engage.
(See figure 15)



Figure 15

then release the barrel to the Tipped Up position. Then lower the fully-cocked or half-cocked hammer to the fully lowered position. (See figure 16)



Figure 16

1st disengage the Safety. Manually retract the hammer spur. Depress the trigger while cautiously allowing the hammer to move all the way forward under thumb control. When the hammer is fully-

lowered, ENGAGE SAFETY (push up—Safety locks slide, covering red warning dot).

HOW TO COCK THE HAMMER: Since the Model MC14T has a double action trigger mechanism, manual hammer cocking is not necessary unless the shooter prefers to fire the first round by the shorter and lighter single action trigger pull.

WARNING!! Even though the Model MC14T has an automatic firing pin block and Half-Cocked hammer position, a falling hammer (even from a short distance) may cause discharge if the cartridge has a sensitive primer and the trigger is in the rearward position.

The safest way to cock the hammer on the MC14T is to release / Tip Up the barrel. To cock the fully-lowered hammer to fully-cocked position: Disengage the Safety. Keep finger away from trigger. Place the thumb on the hammer spur. Retract the hammer in a continuous motion to solid frame tang stop. (See figure 17)



Figure 17

A click sound indicates the sear is in position to secure the hammer. Gradually ease up the thumb pressure, allowing the hammer to move forward a short distance to solid hammer/sear engagement. (See figure 18). Remove thumb from spur and ENGAGE SAFETY.



Figure 18

SAFETY/FULLY-COCKED HAMMER RELATIONSHIP:' Remember—when the pistol is chamber loaded by slide manipulation or automatically during the shooting cycle (but not direct hand loading of chamber), the hammer is fully-cocked and the pistol is ready to fire. WARNING!! Careless handling of a loaded pistol, with or without the safety engaged, could result in accidental discharge. DO NOT check the mechanical functioning of the Safety when the CHAMBER IS LOADED—check it with an empty chamber. DO NOT try to override the Safety by asserting excessive trigger pull force. A soft click from a spring plunger can be heard when the Safety is turned between "ON" and "OFF". The spring plunger secures the Safety in either position. The Safety is ENGAGED "ON" in its upward position. NO Red Warning Dot is visible. The Safety is DISENGAGED "OFF" in its downward position. The RED WARNING DOT is visible. The Safety, when engaged, securely blocks the Sear, preventing trigger pull and hammer fall. The Safety, when engaged, locks the slide. (See figure 19)



Figure 19

SAFETY/FULLY-LOWERED HAMMER RELATIONSHIP: Remember—the chamber may be loaded even though the hammer is Fully-Lowered position.

WARNING!! If the pistol is carried chamber loaded with the hammer fully-lowered ENGAGE the SAFETY: DO NOT try to override the Safety by asserting excessive trigger pull force. Also, the mechanism may be

damaged by forceful manual hammer cocking.

A soft click can be heard when the Safety is turned between "ON" and "OFF". The Safety, in its upward ENGAGED position locks the slide. NO RED WARNING DOT is visible. When the Safety in it's down position the RED WARNING DOT is visible.

The fully-lowered Hammer with the Safety ENGAGED can be retracted into the half-cocked (Drop Catch) position by manual cocking the hammer. (See figure 20)



Figure 20

SAFETY/HALF-COCKED HAMMER RELATIONSHIP:
To REDUCE the chance of untriggered discharge due to accidental hammer fall from the full-cocked position, the falling hammer is caught and secured in a half-cocked position by the Sear entering the Hammer's Drop Catch Notch. (See figure 22)
When the Hammer is half-cocked and the Safety ENGAGED, the hammer cannot be retracted to its fully cocked position. With the hammer half-cocked and the Safety DISENGAGED "OFF", the pistol can be fired by the double action trigger pull, the length of pull being slightly shorter when fired from the Drop Catch position.



Figure 21

Even though the MC14T has an automatic firing pin block we do not recommend carrying the pistol with the hammer in the half cock position or the full cock position without proper professional firearms training. (Not your friend down the street).

DOUBLE ACTION TRIGGER PULL: Think of the Double Action feature as a safety device. It makes it possible to fire the pistol quickly from the hammer's fully-lowered position. (See figure 22) It eliminates the necessity of manual hammer cocking. Take advantage of the Double Action Trigger Pull. CAUTION!! Always ENGAGE SAFETY when the hammer is fully-lowered—unless you are ready to shoot. NOTE:



Figure 22

During normal shooting with a loaded magazine, only the first shot requires Double Action trigger pull. The remaining rounds will be discharged by Single Action trigger pull. The Double Action pull is longer and slightly harder than the Single Action pull.

SINGLE ACTION TRIGGER PULL: The Single Action trigger pull is light, short and crisp. It is ideal for improved accuracy. CAUTION!! Always ENGAGE SAFETY when the hammer is fully-cocked—unless you are ready to shoot. (See figure 23)



Figure 23

FIRING: Check that your target and backstop are safe. Point the muzzle in a safe direction (toward backstop) and disengage the Safety. Grasp the pistol firmly with your shooting hand—if you prefer, use two hands support. Be sure to avoid finer rest against the Tip Up Lever, or safety leaver. Also, be sure to keep hand(s) below the slide to permit free slide recoil.

Aim the pistol and align front and rear sight on target, fire by squeezing the trigger (See figure 24). Be sure to point the muzzle in a safe direction after discharge—and keep finger off the trigger. The discharge will recoil the slide, eject the fired (spent) cartridge case, the hammer will be fully cock. The compressed recoil springs will automatically close the slide, feeding the next cartridge from the magazine into the chamber, and the pistol is ready to fire until empty. NOTE: The slide will lock back on an empty magazine. As a precaution remove the magazine, release the slide forward with the side stop and then move the Tip Up leaver downward to expose the chamber for inspection.



Figure 24

MISFIRE AND/OR HANG-FIRE:

Should you experience a misfire (no discharge) wait at least 15 seconds as a precaution against hang-fire (delayed discharge due to faulty ammo). If no discharge occurs, (With the pistol pointed in a safe direction) pull the trigger again in the double action mode (as a safety precaution, DO NOT thumb cock the hammer).



Figure 25

On the second attempt, if no discharge occurs, wait 15 seconds and then move the Tip Up leaver down to release the barrel, remove the cartridge from chamber and check firing pin indentation in primer. (See figure 25) If normal, reload and continue shooting, but if minor or absent, leave gun unloaded and remove the magazine. Take the MC14T to your local gunsmith for review.

JAMMING/MALFUNCTIONING:

All Girsan firearms have been designed, manufactured and thoroughly tested to insure durability and trouble-free function. If properly maintained, operated, and loaded with good quality ammunition, malfunction is

practically nonexistent. NOTE: Should malfunction (jamming) occur while loading, unloading or shooting, DO NOT PANIC—simply your keep fingers away from the trigger, be sure to point the muzzle in a safe direction and engage the safety; and if possible 1. Move the barrel Tip Up leaver down to lift the barrel and remove the round in the chamber 2. Remove the Magazine 3. Check pistol for damage and mechanical function. 4. Check ejected cartridge. Do not load with damaged (dented or deformed) ammunition.

DISASSEMBLY: (Field Stripping of Unloaded Pistol)
1.Remove Magazine by depressing the magazine release button. (See figure 26)
2. Release Barrel by pushing the Tip Up Leaver down. (See figure 27)
3. Disengage the safety (See figure 28)
4. Fully-Cock the Hammer (See figure 29)
5. Pull the slide rearward and engage the slide stop to hold the slide open.

CAUTION! Further Disassembly not recommended for cleaning.



Figure 26



Figure 27



Figure 28



Figure 29

REASSEMBLY:
1. Push the slide stop downward to release the slide (See figure 30)
2. Close the barrel (See figure 31)
3. Put empty magazine back into MC14T (See figure 32)

NOTE: It is important that a weapon be kept clean and properly oiled to insure perfect functioning, but weapons are often "worn out" or damaged more by unnecessary and excessive disassembly and assembly than by shooting.



Figure 30



Figure 31



Figure 32

CLEANING: Clean pistol (See figure 33 & 34) whenever a notable amount of gun powder residue, grease, cartridge metal particles, field dirt, etc. have accumulated in the action. Use a good grade of CLP (Cleaner-Lubricant-Preservative) gun oil. Use a lint free cloth; a small brush, pipe cleaners, cotton swabs, toothpicks and a small wood applicator to remove dirt, etc.—



Figure 33

DO NOT use a sharp instrument. Always clean the barrel bore and chamber thoroughly after shooting using a cleaning rod with a patch, or brush If a bore cleaner is used, do not allow it to come in contact with external finishes or internal moving parts.

Always clean the breech/or bolt face of the slide. Be sure to check for free movement of the firing pin. Oil moving parts, especially the frame rails, lightly. For most effective exterior rust protection, rub a thin film of oil onto the surface with a cloth.



Figure 34

LIMITED LIFETIME WARRANTY

This European American Armory Corp. firearm is warranted to the original retail customer for life from date of purchase against defects in material and workmanship. All parts and labor or replacement at our option are covered.

Transportation to and from our repair facilities, government fees, damage caused by failure to perform normal maintenance, sales outside the United States, damage due to use of high velocity, high pressure, reloaded or other nonstandard ammunition, or any unauthorized repair, modification, misuse, abuse, or alteration of the product is not covered by this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from date of original retail purchase. Consequential or incidental damages and/or expenses, or any other expenses are not covered by this warranty.

To obtain warranty performance send your firearm with proof of retail purchase, freight prepaid plus $20.00 for return freight to:

European American Armory Corp.
1426 King Street P.O. Box 3008
Cocoa, FL 32922

All other mail should go to: EAA Corp
1426 King Street P.O. Box 3008
Cocoa, FL 32922 Cocoa, FL 32924


NOTICE: It is illegal to ship a firearm with ammunition in the firearm or in the same packaging. Firearms and ammunition must be shipped separately.

For information about shipping ammunition, call European American Armory Corporation at (321) 639-4842.

(.380 ACP) MC 14T-500 EXPLODED DRAWING

DÖKÜMAN NO: D.1.1-26
REVİZYON NO: 00

GİRSAN
MAKİNE VE HAF.SLH.SAN.TİC.A.Ş.
PAZARSUYU KÖYÜ 2.OSB BÖLGESİ 5.CAD. NO:26
BULANCAK/GİRESUN
TEL: 0454 215 39 35 - 0454 215 29 31
FAX: 0454 215 39 28
http://www.girsan.com
e-posta: girsan@girsan.com

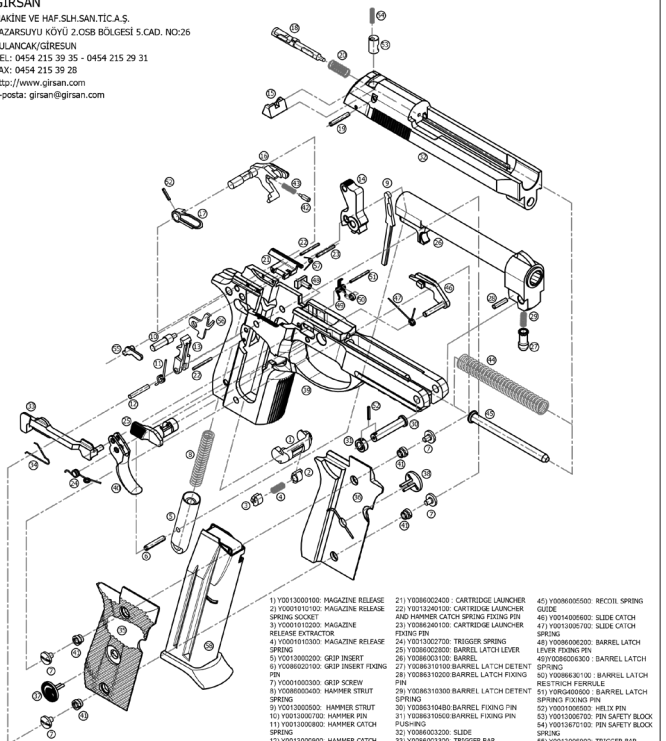

1) Y0013000100: MAGAZINE RELEASE
2) Y0001012100: MAGAZINE RELEASE SPRING SOCKET
3) Y0001012200: MAGAZINE RELEASE EXTRACTOR
4) Y0001013000: MAGAZINE RELEASE SPRING
5) Y0013000200: GRIP INSERT
6) Y0086020100: GRIP INSERT FIXING PIN
7) Y0001003300: GRIP SCREW
8) Y0086000400: HAMMER STRUT SPRING
9) Y0013000500: HAMMER STRUT
10) Y0013000700: HAMMER PIN
11) Y0013000800: HAMMER CATCH SPRING
12) Y0013000900: HAMMER CATCH PIN
13) Y0013001000: SEAR
14) Y0086001100: HAMMER
15) Y0086001600: REAR SIGHT
16) Y0013001800: SAFETY LEVER
17) Y0013180100: RIGHT SAFETY LEVER
18) Y0013002100: FIRING PIN
19) Y0013210100: FIRING PIN FIXING PIN
20) Y0013002200: FIRING PIN SPRING
21) Y0086002400 : CARTRIDGE LAUNCHER
22) Y0013240100: CARTRIDGE LAUNCHER AND HAMMER CATCH SPRING FIXING PIN
23) Y0086240100: CARTRIDGE LAUNCHER FIXING PIN
24) Y0013002700: TRIGGER SPRING
25) Y0086002800: BARREL LATCH LEVER
26) Y0086003100: BARREL
27) Y0086310100:BARREL LATCH DETENT
28) Y0086310200:BARREL LATCH FIXING PIN
29) Y0086310300:BARREL LATCH DETENT SPRING
30) Y0086310480:BARREL FIXING PIN
31) Y0086310500:BARREL FIXING PIN PUSHING
32) Y0086003200: SLIDE
33) Y0086003300: TRIGGER BAR
34) Y0086330100: TRIGGER BAR SPRING
35) Y0086035A00: A RIGHT GRIP PANEL
36) Y0086035B00: B LEFT GRIP PANEL
37) Y1911351100: BADGE RIGHT LOGO
38) Y1911352200: BADGE LEFT LOGO
39) Y0086040B00: FRAME
40) Y0086004200: TRIGGER
41) Y0001004300 GRIP SCREW BUSHINGS
42) Y0013004400: SAFETY LEVER PIN
43) Y0013440100: SAFETY LEVER PIN SPRING
44) Y0086005000: RECOIL SPRING
45) Y0086005500: RECOIL SPRING GUIDE
46) Y0014006600: SLIDE CATCH
47) Y0013006700: SLIDE CATCH SPRING
48) Y0086006200: BARREL LATCH LEVER FIXING PIN
49)Y0086006300 : BARREL LATCH SPRING
50) Y0086636100 : BARREL LATCH RESTRICH FERRULE
51) Y0RG4008000 : BARREL LATCH SPRING FIXING PIN
52) Y0013006500: HELIX PIN
53) Y0013006700: PIN SAFETY BLOCK
54) Y0013670100: PIN SAFETY BLOCK SPRING
55) Y0013006900: TRIGGER BAR SUPPORTER
56) Y0013007000: PIN SAFETY BLOCK LEVER
57) Y0013700100: PIN SAFETY BLOCK LEVER SPRING
58) Y0014050300 MAGAZINE

GIRSAN and its Official Distributors are not responsible for product malfunction or for physical injury or property damage resulting from criminal or negligent use of the product, improper or careless handling, unauthorized modifica-tions, use of defective, improper, hand loaded or reloaded ammuni-tion, or other influences done by using pistol beyond manufacturer's direct and immediate control.

WARNING ⚠

Children are attracted to and can operate firearms that can cause severe injuries or death. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

ADVERTENCIA ⚠

A los niños los atraen las armas de fuego y las pueden hacer funcionar. Estas pueden causarse lesiones graves y la muerte. Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente, le pueden dar una multa o enviarlo a la carcel.

MANUFACTURER
Teyyareduzu Mh, Sunta Sk. No: 25 GIRESUN
T: +90 454 215 29 31
: +90 454 215 39 35
F: +90 454 215 39 28
www.girsan.com
girsan@girsan.com

IMPORTER
European American Armory Corp.
1426 King Street Cocoa, FL 32922
www.eaacorp.com
eaacorp@eaacorp.com